


Use Masking tape to secure carbon fiber to this paper  
Carefully epoxy one wood support on top of the carbon fiber  
Once the epoxy has set remove the assembly from the paper  
Center and glue the second supports on the back side

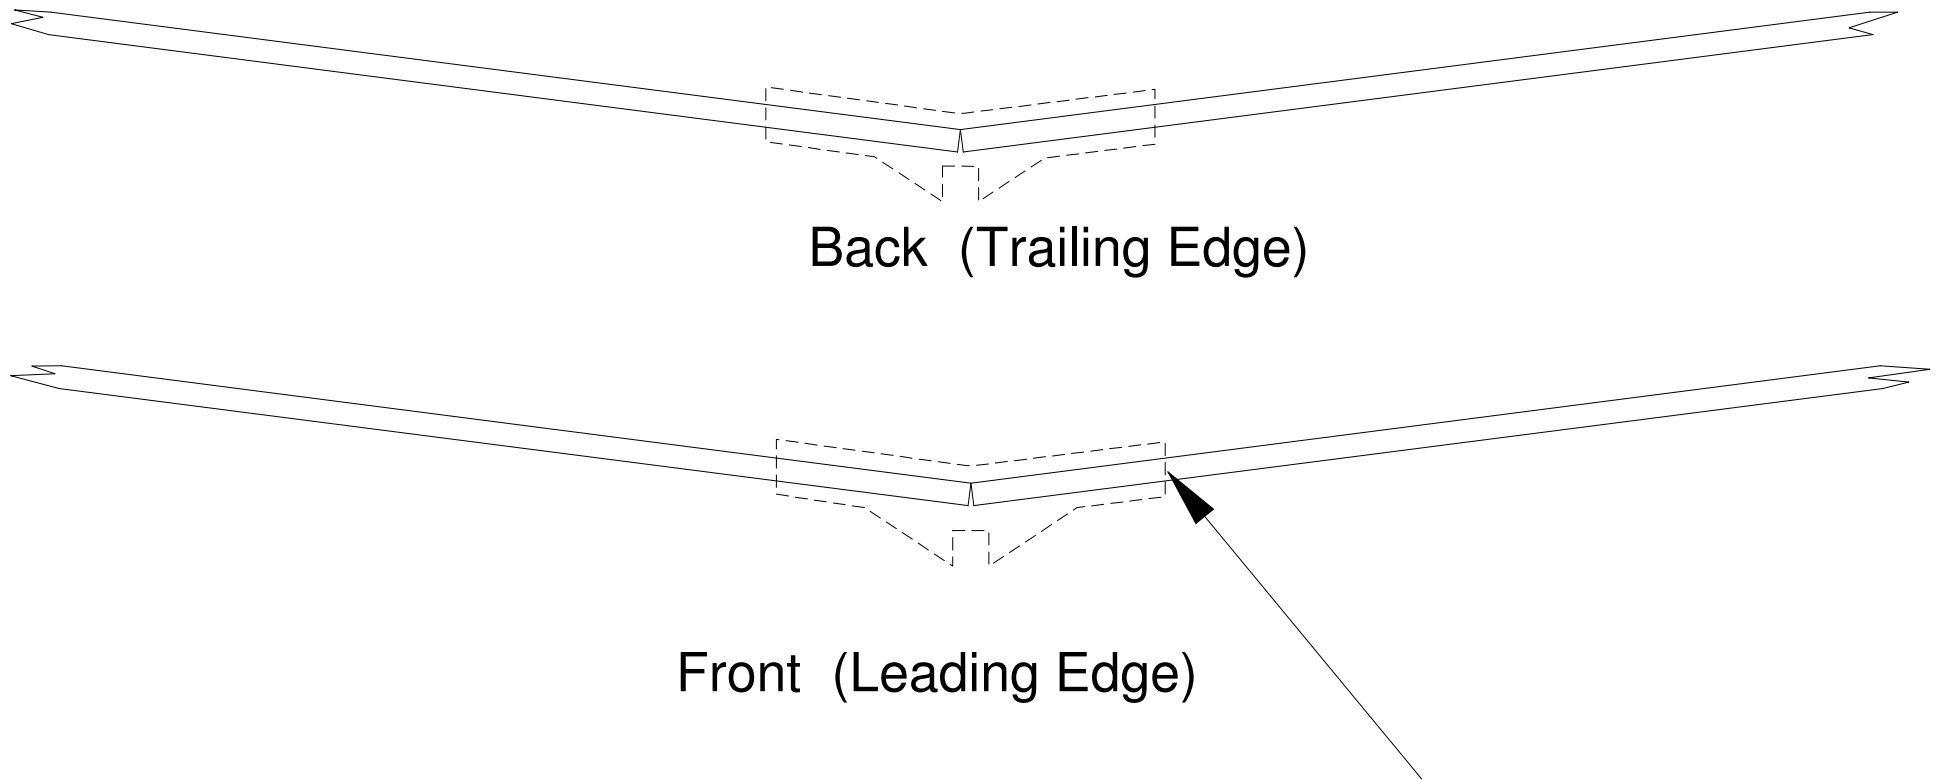

The front wood supports have notches cut in the side